# SERIES TTB DIGITAL TORQUE METER

Certificate | Data output | Charge

- For torque wrench and torque screwdriver calibration
- Peak, preset and real-time working mode
- Unit: N.m, N.cm, kgf.cm, lbf.ft, lbf.in
- Memory: 1000
- Power off automatically
- With software, can show the torque graph
- With manufacturer inspection certificate

VIDEO




TTB10

run down adapter for torque meter(optional)



unit: mm

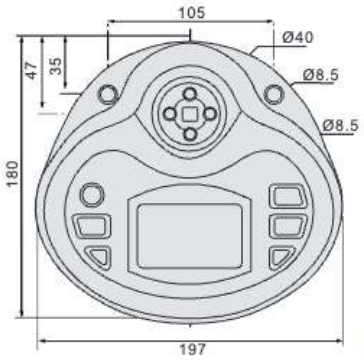





TTB500

Stand (optional)



## SPECIFICATION

| Code | TTB5 | TTB10 | TTB50 | TTB100 | TTB500 | TTB1000 |
|---|---|---|---|---|---|---|
| Range | 0.25-5N.m | 0.5-10N.m | 2.5-50N.m | 5-100N.m | 25-500N.m | 100-1000N.m |
| Accuracy | ±0.3% | | | | | |
| Resolution | 0.0005N.m | 0.001N.m | 0.005N.m | 0.01N.m | 0.05N.m | 0.1N.m |
| Size of square drive | 1/2" | | | | 3/4" | 1" |
| Output | USB and RS232 | | | | | |
| Power | rechargeable battery | | | | | |
| Weight | 1.5kg | | | | 3kg | |

## INCLUDED ACCESSORIES

| | |
|---|---|
| Main unit | 1pc |
| Charger | 1pc |
| Software with cable | 1pc |
| Convertor(TTB500 and TTB1000 doesn'include) | 1pc |

## OPTIONAL ACCESSORIES

| | |
|---|---|
| Wireless printer | PR100 |
| Stand(Arm length:150-600mm) | TTB-ST1 |
| Stand(Arm length:150-1000mm) | TTB-ST2 |
| Stand(Arm length:150-1500mm) | TTB-ST4 |

| | |
|---|---|
| RUN DOWN ADAPTER FOR TORQUE METER(2N.m) | TTB-RDF2 |
| RUN DOWN ADAPTER FOR TORQUE METER(6N.m) | TTB-RDF6 |
| RUN DOWN ADAPTER FOR TORQUE METER(40N.m) | TTB-RDF40 |
| RUN DOWN ADAPTER FOR TORQUE METER(100N.m) | TTB-RDF100 |