RENISHAW
apply innovation™


Equator 300 and Equator 300 extended height - working volumes


Equator 300 (EQ33)


Working volume	XY Ø300 mm, Z 150 mm
Height of working volume above plate	55 mm
Machine weight	25 kg
Dimensions (WxDxH)	570 mm x 500 mm x 700 mm


Equator 300 extended height (EH33)

Working volume	XY Ø300 mm, Z 150 mm
Height of working volume above plate	205 mm
Machine weight	27 kg
Dimensions (WxDxH)	570 mm x 500 mm x 850 mm

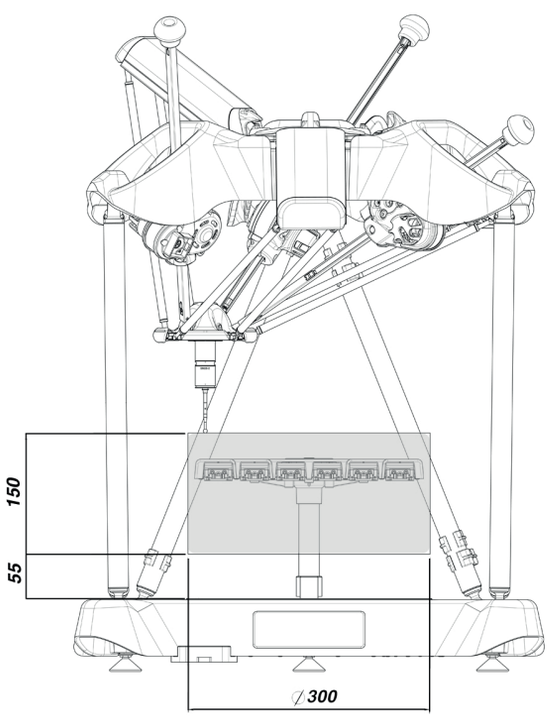

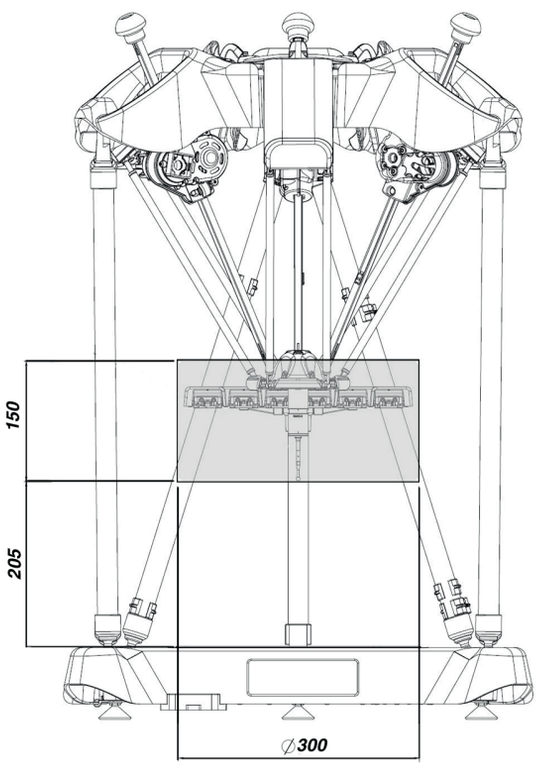

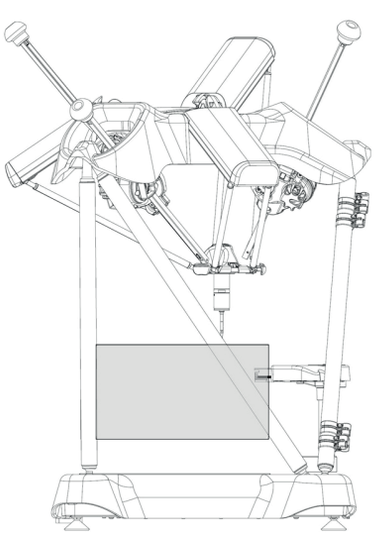


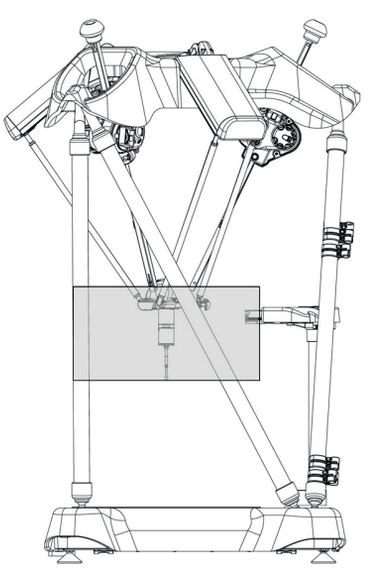

RENISHAW
apply innovation™


Equator™ 300 versatile gauge

Equator 300

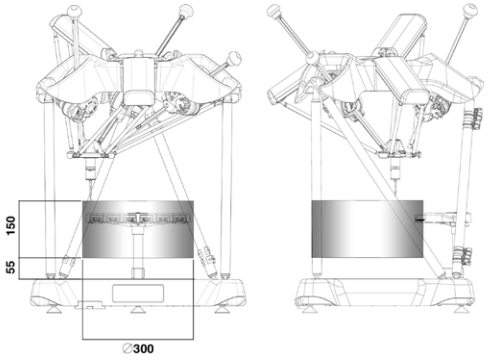

Working volume (WV)	XY Z	Ø300 mm 150 mm
WV height from base*	55 mm	
Machine weight	25 kg	
Dimensions (W×D×H)	570 mm × 500 mm × 700 mm	

Equator 300 Extended Height

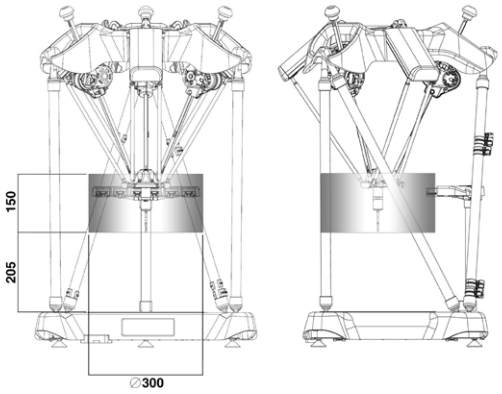

Working volume (WV)	XY Z	Ø300 mm 150 mm
WV height from base*	205 mm	
Machine weight	27 kg	
Dimensions (W×D×H)	570 mm × 500 mm × 850 mm	

* The position of the working volume in the Z direction depends on the length of the stylus. For example, the dimensions shown above are when using an SP25 with a 21×5 stylus. When using a 75 × 8 stylus on the EQ 300 standard height, the working volume boundary starts at the fixture plate.

Specification

Comparison uncertainty*	±0.002 mm
Probe type - scanning	Renishaw 3-axis SP25 analogue scanning
Maximum scanning speed (SP25)	200 mm/s
Scanning rate (SP25)	1000 points/s
Probe type - touch-trigger	Renishaw 3-axis TP20 kinematic touch-trigger
Recommended touch speed (TP20)	10 mm/s
Maximum movement speed	500 mm/s
Scale resolution	0.0002 mm
Fixturing requirement*	±1 mm
Machine air supply requirement	No air required
Operating temperature	+5 °C to +50 °C
Storage temperature	-25 °C to +70 °C
Relative humidity operating range	Maximum 80 %RH at 40 °C, non condensing
Machine electrical supply requirements	100-240 V AC ±10 %, 50-60 Hz
Maximum power consumption**	190 W
Typical power consumption***	80-100 W
Fixture plate	305 mm × 305 mm aluminium
Maximum workpiece weight	25 kg

* The process of measuring on an Equator involves defining a series of gauge points on the component surface. Periodic calibration of a master part on a CMM establishes datum values for each gauge point. The same gauge points on the same master part are measured on Equator, 'mastering', to establish a correlation with the certified CMM. Subsequently, a regular 're-mastering' process is used to account for changing environmental conditions. Size and position measurements made immediately following re-mastering will have a comparison uncertainty of ±0.002 mm relative to the certified measurements of the master part. This specification applies where each part is fixtured to within 1 mm relative to the master part.

** Peak consumption at power up.

*** 3-axis system typical consumption based on taking touch points under DCC control.

RENISHAW
apply innovation™

Equator 300 ordering





A - EQ 3 3 - 1 S 1 1 A

Part number type

A = Assembly

Series

EQ = Equator with SP25
EH = Equator Extended Height with SP25
TQ = Equator with TP20
TH = Equator Extended Height with TP20

Working volume

3 = 300 mm diameter

Number of axes

3 = 3 axes

Controller standard

1 = Controller kit with Organiser and MODUS (Operator version)
2 = Controller kit with Organiser and MODUS (Programmer version)

Manual functions

S = Stop button
J = Joystick kit
B = Button interface and stop button kit

Fixture plate hole size

1 = M6 41 holes
2 = M8 41 holes
3 = Imperial ¼ in. 41 holes
4 = Imperial ¼ in. 441 holes modular fixture plate
5 = M6 441 holes modular fixture plate
6 = M8 441 holes modular fixture plate

Extended warranty

0 = Without extended warranty
1 = 1 year extended warranty (covering year 2 of ownership)

Power cables (× 2 per system)

A = UK; B = EU and Korea; C = USA, Mexico, Canada, Japan and Taiwan; D = China; E = South Africa and India; F = Switzerland; G = Denmark; H = Australia; I = Israel; J = Italy and Chile; K = Brazil

www.renishaw.com/contact

#renishaw

+44 (0) 1453 524524 **uk@renishaw.com**

© 2026 Renishaw plc. All rights reserved. This document may not be copied or reproduced in whole or in part, or transferred to any other media or language by any means, without the prior written permission of Renishaw.
RENISHAW® and the probe symbol are registered trade marks of Renishaw plc. Renishaw product names, designations and the mark 'apply innovation' are trade marks of Renishaw plc or its subsidiaries. Other brand, product or company names are trade marks of their respective owners.
WHILE CONSIDERABLE EFFORT WAS MADE TO VERIFY THE ACCURACY OF THIS DOCUMENT AT PUBLICATION, ALL WARRANTIES, CONDITIONS, REPRESENTATIONS AND LIABILITY, HOWSOEVER ARISING, ARE EXCLUDED TO THE EXTENT PERMITTED BY LAW. RENISHAW RESERVES THE RIGHT TO MAKE CHANGES TO THIS DOCUMENT AND TO THE EQUIPMENT, AND/OR SOFTWARE AND THE SPECIFICATION DESCRIBED HEREIN WITHOUT OBLIGATION TO PROVIDE NOTICE OF SUCH CHANGES.
Renishaw plc. Registered in England and Wales. Company no: 1106260. Registered office: New Mills, Wotton-under-Edge, Glos, GL12 8JR, UK.

Part no.: H-5504-8251-06-A
Issued: 02.2026